



## Supplemental Installation Instructions

### Removing and Replacing Overly Super H Door Bottom Neoprene Seal

- Step 1.** Remove the door bottom assembly from door.
- Step 2.** Peel off existing sponge rubber.
- Step 3.** Using a razor blade scraper, remove any existing material and adhesive left on the 11 Ga. metal.
- Step 4.** On the same side of the 11 Ga. metal that you just scrapped off, take the roll of double faced tape and run a strip of tape just below the obround holes in the 11 Ga. metal.

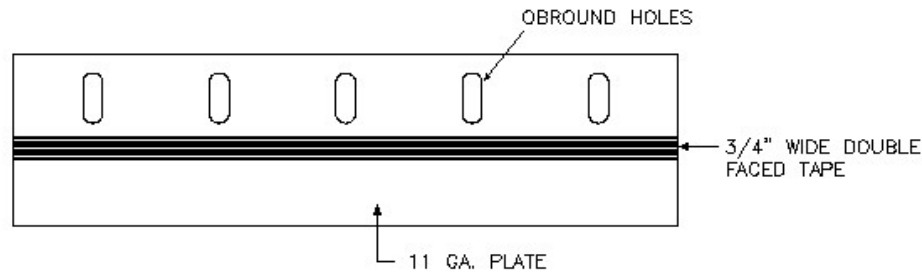

- Step 5.** Unroll and cut a piece of Super H door bottom rubber from the supplied roll. Cut the piece of neoprene 2 in. longer than the jamb opening width of the door.
- Step 6.** Remove the protective covering on the tape that is on the 11 Ga. metal, exposing the sticky adhesive. Take the super H neoprene and apply it to the 11 Ga. metal. When you unrolled the rubber it will have a slight curl to it over its length. When you apply it to the metal, keep the curl facing away from the adhesive and index the edge of the neoprene just below the obround slots.

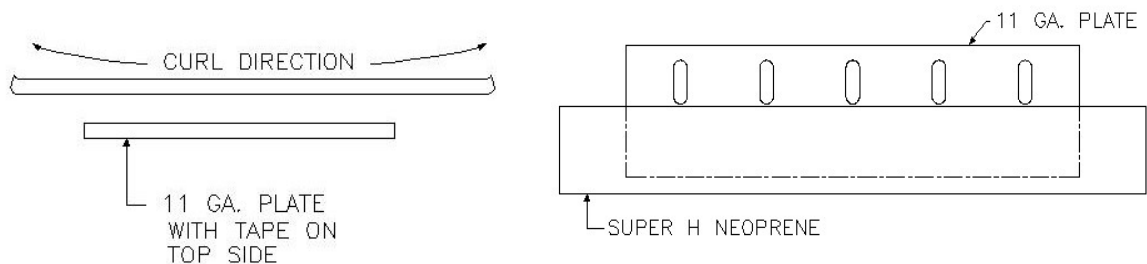

**Step 7.        Attach the repaired door bottom to the door and trim the rubber even with the edges of the door.**

**Step 8.        Readjust the door bottom to contact the top of the threshold or finished floor.**

